

Registration

1. To register a 25055 accessory handset to a RCA 25212 cordless phone, press the **MENU** soft key on your 25212 base phone.

2. Press **SELECT** again on the **PHONE** setting menu.

→ MAIN MENU
PHONE SETTING
DISPLAY SETTING
SOUND SETTING

3. Using the VOL (+/-) button to navigate, scroll to **ADD HEADSET** and press the **SELECT** soft key. The LCD on the 25212 or 25252 will read **"PAIRING PLEASE WAIT..."** and will begin searching for a compatible accessory handset.

4. Using your 25055 accessory handset, press the **REG** soft key.

NOTE: If your headset is unregistered, the LCD screen will read **"PRESS 'REG' TO INITIATE REGISTRATION."** The **REG** soft key will be the only option available.




continued...

5. The LCD will then read **"REGISTERING..."** and will begin searching for your 25212 base phone.

6. If registration was successful, the LCD on the base phone will read **"PAIRING COMPLETE!"**, the LCD on the handset will read **"REGISTRATION COMPLETE!"** and you will hear a confirmation tone as both return to the main menu.

NOTE: If registration fails, you will hear an error tone and the LCD on the base phone will read **"PAIRING FAILED!"** You will hear an identical error tone from the handset, with the "LCD reading HS REG FAILED."

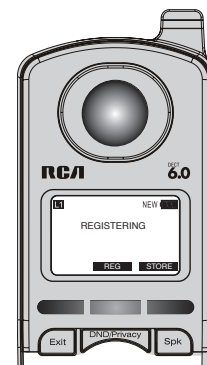

quick start guide

25212

RCA
XiXiXi™



www.rca4business.com

For Customer Assistance
call 1-800-511-3180


RCA is a trademark of RCA Trademark
Management S.A., used under license.

Button Layout



Easy to Navigate Menus

1. To navigate around the menus use the volume up and down buttons and the soft keys just below the screen. Both the large base and cordless handset have menus that can be navigated in this way.

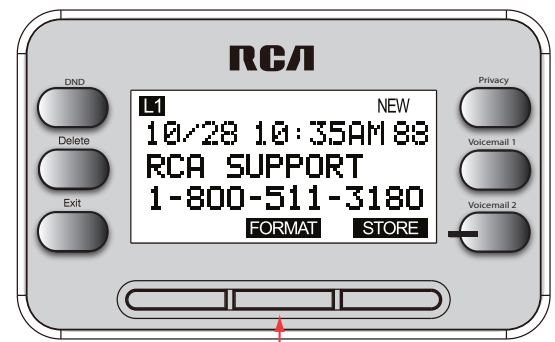

Note: To choose a soft key option, press the button directly under that part of the screen.

Note: The DIR and CID buttons on the left and right are also used in menus to switch between some options.

Storing Phone Numbers

1. To program a one-touch dial press **STORE**.
2. Press the one-touch button to be programmed.
3. Use the keypad to enter the name for this contact. This is done the same way names can be entered into cell phones. Press **SAVE**.
4. Enter the phone number and press **SAVE**.

